


ITEM No.	DESCRIPTION	PART No.
1	BCU-162-010	INFLATE BUTTON ASSY
2	004	O-RING
3	BCU-162-020	INFLATE SPRING
4	008	O-RING
5	BCU-162-040	SPRING BASE
6	BCU-162-130	EXHAUST SPRING
7	BCU-162-110	EXHAUST BUTTON
8	BCU-162-140	EXHAUST BUTTON COVER
9	BCU-162-160	MOUTHPIECE
10	BCU-162-200	QUICK BODY
11	BCU-029-080	STEM GUIDE
12	BCU-029-070	PURGE SPRING
13	113	O-RING
14	BCU-162-170	PURGE BUTTON
15	BCU-162-060	INFLATE PLUG
16	014	O-RING
17	BCU-162-050	INFLATE POPPET
18	003	O-RING
19	BCU-162-120	EXHAUST STEM
20	007	O-RING
21	BCU-162-190	EXHAUST AXLE
22	BCU-162-220	EXHAUST AXLE SPRING
23	011	O-RING
24	BCU-162-210	EXHAUST AXLE CHAMBER
25	012	O-RING
26	BCU-029-120	PLUG
27	BCU-029-101	PURGE SEAT
28	BCU-162-180	PURGE STEM
29	BCU-162-150	PISTON CHAMBER
30	BCU-162-100	PISTON SPRING
31	BCU-162-240	O-RING
32	BCU-162-090	PISTON
33	BCU-162-070	CORD RETAINER
34	010	O-RING
35	BCU-162-080	PISTON HOUSING
36	BCU-162-230	WIRE END RETAINER
37	BCU-163-080	WIRE ASSY.

BCU-162 A.P.A.

ACTIVE PURGE ASSIST

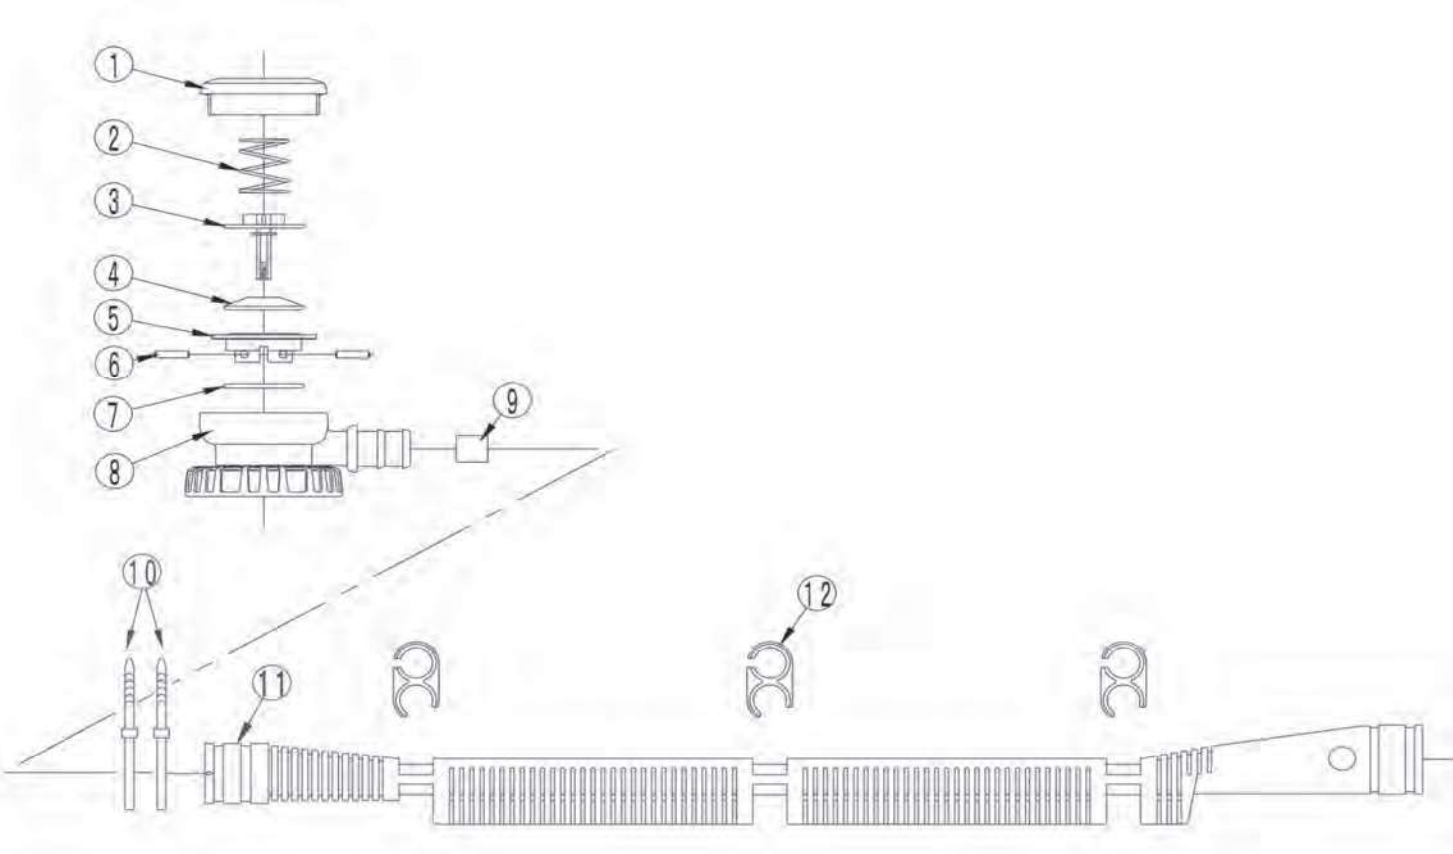

BCU-163 A.P.A

ACTIVE PURGE ASSIST

ITEM No.	PART No.	DESCRIPTION
1	BCU-163-020	OPEV VALVE CAP
2	BCU-163-030	OPEV SPRING
3	BCU-163-040	VALVE PLATE
4	BCU-163-050	OPEV VALVE
5	BCU-163-060	VALVE BASE
6	BCU-163-160	GUIDE PIN
7	024	O-RING
8	BCU-163-150	OPEV BODY ASSY.
9	BCU-163-090	WIRE TOP RETAINER
10	ST-004-02	STRAP
11	BCU-163-070	INFLATE HOSE
12	BCU-163-130	LOCATOR