


FSR (XTX 200) Exploded Parts Diagram

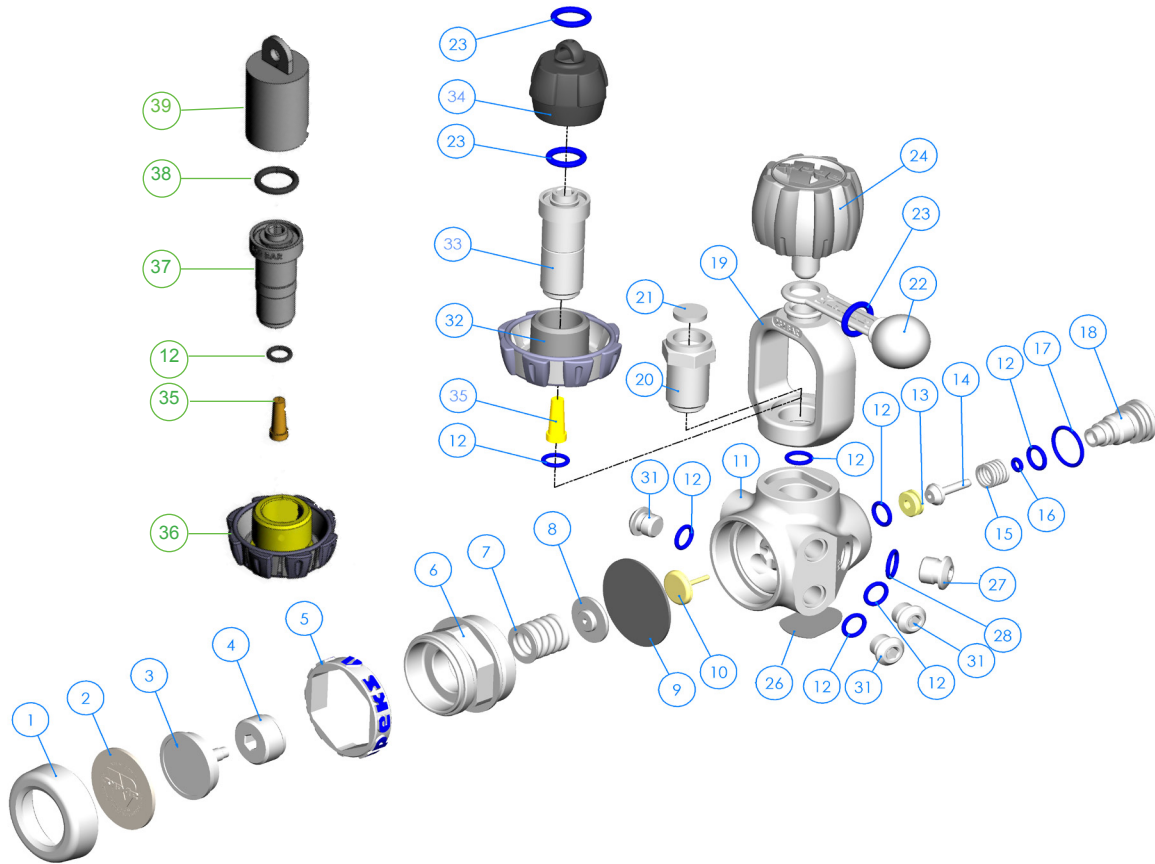

All * items in bold italics to be replaced when servicing

1	AP1484	Environmental End Cap	21*	AP1406	Disc Filter
2	AP1482-1	Hydrostatic Diaphragm	22	AP1404	Protective Cap
3	AP1483	Hydrostatic Transmitter	23*	AP1166	'O' Ring
4	AP1474	Spring Adjuster	24	AP1402/B	2-Shot 'A' Clamp Knob
5	AP5725	Moulded Logo Ring	25	n/a	
6	AP1473-1	Diaphragm Clamp	26	AP5723	Decal
7	AP1475	Spring	27	AP1413	7/16" UNF Blanking Plug
8	AP1476	Spring Carrier	28*	AP1445	'O' Ring
9*	AP1478	Diaphragm	29	n/a	
10	AP5722	Valve Lifter	30	n/a	
11	AP5101	XTX FSR Body	31	AP1408	3/8" UNF Blanking Plug
12*	AP1409	'O' Ring	32	AP6201	DIN Moulded Handwheel
13	AP5721	Removable H.P. Valve Seat	33	AP1471	Handwheel Connector
14*	AP1419	H.P. Valve	34	AP6202	DIN Protective Cap
15	AP1415	Spring	35	AP1472	Conical Filter
16*	AP1299	'O' Ring	36	NP6201	Nitrox Handwheel M26
17*	AP1300	'O' Ring	37	AP1871	Nitrox Handwheel connector M26
18	AP5309/B	H.P. Balance Plug	38*	AP1405	'O' Ring
19	AP1403	Yoke Clamp	39	AP1270	Moss Cap
20	AP1407	Yoke Clamp Connector		n/a	