



WINDOW 1
FAULT: Warning of electronic malfunction.
LOW BATTERY: Warning that batteries need replacing.

WINDOW 2
DEPTH: Current diving depth. FEET (or METERS).
MAX DEPTH: Greatest depth during dive.

WINDOW 3
BOTTOM TIME: Duration of dive.
SURFACE TIME: Interval between dives.

WINDOW 4
PSI (or BAR): Digital readout of current tank pressure.
GRAPHIC HISTOGRAM: Monitor remaining air with horizontal bars.

OPTIONAL COMPASS/THERMOMETER: Useful compass or thermometer can be installed in the "Electronic Console."

"OPTIONAL ACCESSORIES"

The special slate for writing notes underwater and retainer for the Safety Knife easily attaches to the console back. A temperature gauge or low profile compass can be displayed on the top of the console.

FAULT

LOW BATT

DEPTH

35 ft
 MAX 47

BTM TIME

20:38
 SURF 1:20

PSIG

5000
 5000
 4000
 3000
 2000
 1000
 500
 250

FAULT

LOW BATT

DEPTH

10.6 m
 MAX 14.3

BTM TIME

20:38
 SURF 1:20

BAR

345
 5000
 4000
 3000
 2000
 1000
 500
 250

FEET AND PSI OR METERS AND BAR

ELECTRONIC CONSOLE

Scubapro Electronic Console,
 Red Window Frame Standard
 without Slate No. 28-065-000 \$390.00
 Scubapro Electronic Console,
 Red Window Frame Standard
 with Knife and Slate
 No. 28-066-000 \$420.00

ELECTRONIC CONSOLE ACCESSORIES

Electronic Console Window Frame
 Blue with Screws No. 28-065-008 \$ 6.00
 Electronic Console Window Frame
 Scubapro Teal
 with Screws No. 28-065-009 \$ 6.00
 Electronic Console Slate
 with Knife Retainer Kit
 No. 28-065-025 \$15.00